



Instructions
Gebrauchsanleitung
Інструкції
Istruzione

FLEXI **TESTER**
FTS1250

Фосфат LR
(0.00 - 4.00 мг/л)




WATER TESTING
MADE IN GERMANY

Reagents
Reagenzien
Réactifs
Реагенти
Reagenti



FTS1250

PPHPPLR1
Фосфат LR N° 1 Photometer
TbsPPPLR1
Фосфат LR N° 2 Photometer

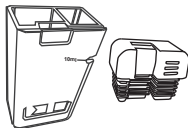

WATER TESTING
MADE IN GERMANY

(GB) CAUTION!

Reagents for water-analysis only!
Do not eat! Keep away from children!
Store cool and dry!
Clean tester properly before testing!

(F) Attention!

Les pastilles sont exclusivement destinées aux analyses chimiques. NE PAS AVALER. Tenir hors de portée des enfants. Conserver dans un endroit frais et sec. Bien rincer le testeur avant chaque utilisation!

(UA) Обережно!

Реагенти тільки для аналізу води! Не вживати в їжу! Зберігати в сухому і прохолодному місці! Ретельно очистіть тестер перед тестуванням!

(I) Attenzione!

Reagenti unicamente per analisi acqua!
Non ingerire!
Tenere fuori dalla portata dei bambini!
Mantenere in luogo asciutto e fresco
Dopo l'utilizzo pulire ed asciugare accuratamente il tester.

(DE) Achtung!

Reagenzien nur für chemische Analysen!
Nicht einnehmen! Darf nicht in die Hände von Kindern gelangen! Kühl und trocken lagern!




clean




1

Залейте 10 мл
води для тестування

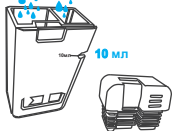


2

Фосфат
LR № 1
Photometer

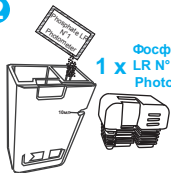

3

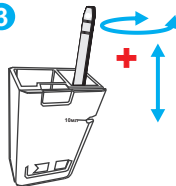

4

Фосфат
LR № 2
Photometer



5

Розчиніть таблетку
ПОВНІСТЮ!




10 хв.



6

6: Вставте
FTS1250
стрічку
Фосфат LR
0.00 - 4.00 мг/л



без миючого засобу!



чистити ретельно

